
INSTALLING A FAN IN YOUR MASCOT

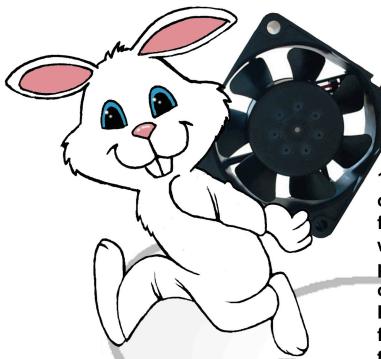

WARNING: Read instructions thoroughly first before installing the fan. Then follow instructions carefully.

IF YOUR MASCOT DID NOT INCLUDE A FAN:

- 1. You must first cut a hole the size of the fan inside the head to place the fan in. Choose a spot where you would like the fan to be. Use a pen or pencil to trace the outline of the fan on the inside of the head. Use an Exact-O knife to cut out the latex and foam being careful not to cut through the fur.
- 2. The fan can then be placed inside and secured with a bit of hot glue. You must also cut a small hole for the 9 volt battery to fit in. Again, trace the shape of the 9 volt battery in a spot where you would like it to be. This time, however, cut the hole slightly smaller than the outline of the battery as this will ensure a snug fit that will hold the battery in place and also allow it to be easily replaced. No glue is required for this part.

IF YOUR MASCOT *DID* INCLUDE A FAN:

- 1. Remove old fan by hand from the square fan hole. Pull firmly as the only thing holding it in is a bit of hot glue. Cut the exposed wires.
- 2. Attach the replacement fan to wires using electrical crimpers and couplers or simply join the wires by soldering or as a last resort, twist together by hand. Red wire attaches to red wire, and black wire to black wire.
- 3. If there is any exposed wire, wrap with black electrical tape. Once the wires are joined, place fan in hole making sure the fan points in the right direction. Also be sure that the fan is not touching the screen and is not blocked by anything.
- 4. A dab of hot glue may be used to secure the fan in the hole.
- 5. You should now have a working fan.